





 

 
 


 



 







Original	Replacement	Original	Replacement
 Power	 Power	 Eco	 3D
 Sleep	 Sleep	 Volume Up	 Vol +
 CBL/SAT	 1	 Volume Down	 Vol -
 Media Player	 2	 Mute	 Mute
 Blu-ray	 3	 Info	 Info
 Game	 4	 Option	 Options
 AUX1	 5	 Back	 Back
 AUX2	 6	 Setup	 Menu
 Phono	 7	 Play	 Play
 TV Audio	 8	 Up	 Up
 Tuner	 9	 Down	 Down
 USB	 Guide	 Right	 Right
 Bluetooth	 0	 Left	 Left
 Internet Radio	 Pre Ch	 Enter	 Ok
 Micro	 Smart	 I<</Tune-	 I<<
 CH/Page Up	 Ch +	 Pause	 Pause
 CH/Page Down	 Ch -	 >>I/Tune+	 >>I



 




 
 


 


 
 



 







Original	Replacement	Original	Replacement
Quick Select 1	D. Menu		
Quick Select 2	Text		
Quick Select 4	AV		
Quick Select 3	Eject		
Green/Movie	Red		
Red/Music	Green		
Blue/Game	Blue		
Yellow/Pure	Yellow		







Original		Replacement		Original		Replacement	
	Power		Power		Volume Up		Vol +
	Sleep		Sleep		Volume Down		Vol -
	CBL/SAT		1		Mute		Mute
	Media Player		2		Up		Up
	Blu-ray		3		Down		Down
	Game		4		Right		Right
	AUX1		5		Left		Left
	AUX2		6		Enter		Ok
	Phono		7		Back		Back
	TV Audio		8		I<</Tune-		I<<
	Tuner		9		Play		Play
	USB		0		Pause		Pause
	Bluetooth		0		>>I/Tune+		>>I
	Internet Radio		Pre Ch		Quick Select 1		D. Menu
	Micro		Smart		Quick Select 2		Text
	CH/Page Up		Ch +		Quick Select 3		Eject
	CH/Page Down		Ch -		Quick Select 4		AV

