



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Play / Pause		Play
	USB / Stop		Stop
	USB / Stop		Media
	Sleep		Rec
	Info		Info
	Red / I<<		Red
	Red / I<<		I<<
	Green / >>I		>>I
	Green / >>I		Green
	Yellow / <<		Yellow
	Yellow / <<		<<
	Blue / >>		Blue
	Blue / >>		>>
	FAV		Pre Ch
	SAT		AV
			Up
			Left
			Ok
			Right
			Down
			Menu
			Exit
			Subt
			Text
			Back
			Dual
			Ch +
			Ch -
			1
			2
			3
			4





Original		Replacement		Original		Replacement	
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				
EPG	EPG	GUIDE	Guide				
TV/RADIO	TV / Radio	SEARCH TV/R	TV/R				

