




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-- Guide / EPG / -/--	 Guide / EPG / -/--
 AV AV / Input / RDS	 AV / Input / RDS
 Menu Menu / Home	 Menu / Home
 Swap Back / Return	 Back / Return
 OK OK	 OK OK

Original	Replacement
 Up	 Up
 PR+ CH+ / Page+	 CH+ / Page+
 PR- CH- / Page-	 CH- / Page-
 Down	 Down
 Right	 Right
 Vol+	 Vol+
 Left	 Left
 Vol-	 Vol-
 TV/TX Text / Goto	 Text / Goto
 PP Fav / Marker / PC	 Fav / Marker / PC
 16:9 Setup / OPT /	 Setup / OPT /
 Red Red / Netflix / Search	 Red / Netflix / Search
 Green Green / APP / Repeat	 Green / APP / Repeat
 Yellow Yellow / YouTube / Repeat	 Yellow / YouTube / Repeat
 Blue Blue / Prime Video / Random	 Blue / Prime Video / Random
 Violet Display / Media	 Display / Media
 [] Smart Controls	 Picture / Format





Original

Replacement

	Smart Controls		Sound / Title
	MIX))·((	Audio / Lang I/II
	P100		Sleep / Timer
	SUB		Subtitle / EQ
	Update		Zoom / Size
	Hold		Stop / Hold
	Doub		Eject / Surround
	REV		TV/Radio /

Original

Replacement

