



Original	Replacement	Original	Replacement
	Zoom / Size		0
	Power		Display / Media
	TV/Radio /		Setup / OPT /
	Guide / EPG / -/--		Up
	Info / Angle		Menu / Home
	Picture / Format		Left
	AV / Input / RDS		OK
	1		Right
	2		Back / Return
	3		Down
	4		Exit / Cancel / Clear
	5		Vol+
	6		Fav / Marker / PC
	7		CH+ / Page+
	8		Vol-
	9		Audio / Lang I/II
	Smart / List		CH- / Page-





Original	Replacement	Original	Replacement
Mute	Mute / Dimmer		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow / Brightness-	Yellow / YouTube / Repeat		
Blue /	Blue / Prime Video / Random		
Stop	Stop / Hold		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
Subtitle	Subtitle / EQ		
<<<	<<< / Tune-		
<<<	<<< / Preset-		
>>>	>>> / Tune+		
>>>	>>  / Preset+		
Text	Text / Goto		
T.Opt	D.Menu / Top		

