







 


 






 

 

 




 






 







 













Original	Replacement
 Power DVD	 Power
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Menu	 Menu / Home
 Return	 Back / Return
 On Screen	 Display / Media
 Theater Position	 Smart / List
 Enter	 OK
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left

Original	Replacement
 Cancel	 Exit / Cancel / Clear
 Zoom	 Zoom / Size
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 3D Phonic	 Audio / Lang I/II
 Strobe	 AV / Input / RDS
 Digest	 Picture / Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Original	Replacement
10	Guide / EPG / -/--
+10	Fav / Marker / PC
Open/Close	Eject / Surround
Resume	Text / Goto
Power Tv	Shift + Power
Tv/Video	TV/Radio /
Tv CH+	CH+ / Page+
Tv CH-	CH- / Page-
Tv Vol+	Vol+
Tv Vol-	Vol-
Enter Tv	Shift + OK
1 Tv	Shift + 1
2 Tv	Shift + 2
3 Tv	Shift + 3
4 Tv	Shift + 4
5 Tv	Shift + 5
6 Tv	Shift + 6

Original	Replacement
7 Tv	Shift + 7
8 Tv	Shift + 8
9 Tv	Shift + 9
0 Tv	Shift + 0
10 Tv	Shift + Guide / EPG / -/--

