



 







 











 







 











 







 







 







 







Original		Replacement		Original		Replacement	
	Standby/On		Power		Menu		Shift + Menu /
	Open/Close		Eject / Surround		Home Menu		Menu / Home
	Audio		Audio / Lang I/II		Return		Back / Return
	Subtitle		Subtitle / EQ		Up		Up
	Angle		Info / Angle		Down		Down
	1		1		Right		Right
	2		2		Left		Left
	3		3		Enter		OK
	4		4		<</<  /<		<< / Tune-
	5		5		Play		Play / Slow
	6		6		>>/  >/>		>> / Tune+
	7		7		I<<		I<< / Preset-
	8		8		Pause		Pause / Step / Freeze
	9		9		Stop		Stop / Hold
	0		0		>>I		>>I / Preset+
	Clear		Exit / Cancel / Clear		Play Mode		Guide / EPG / -/-
	Top Menu		D.Menu / Top		Surround		Shift + Eject / Surround





Original	Replacement	Original	Replacement
	Zoom		Zoom / Size
	Display		Display / Media

