







 









 

























































 

 

 

 


 
 





 

 



Original	Replacement
 Power	 Power
 Red	 Red / Netflix / Search
 Mute	 Mute / Dimmer
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 NR	 Exit / Cancel / Clear
 Auto	 Display / Media
 Recall	 Back / Return
 Add	 Shift + TV/Radio / Program
 Dual	 Audio / Lang I/II
 Text	 Text / Goto
 Input	 AV / Input / RDS
 Up	 Up
 CH+	 CH+ / Page+
 Down	 Down

Original	Replacement
 CH-	 CH- / Page-
 Right	 Right
 Left	 Left
 Vol-	 Vol-
 Menu	 Menu / Home
 OK	 OK
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +100	 Guide / EPG / -/-
 0	 0





Original	Replacement	Original	Replacement
 Last	 Shift + Back / Return		
 P.STD	 Smart / List		
 S.STD	 Eject / Surround		
 ARC	 Stop / Hold		
 Still	 Pause / Step / Freeze		
 Zoom-	 Zoom / Size		
 Zoom+	 Setup / OPT /		
 Multi-PiP	 TV/Radio /		
 Size	 Shift + Zoom /		
 S.Swap	 Subtitle / EQ		
 Win-Sel	 D.Menu / Top		
 Locate	 Sound / Title		
 Swap	 Picture / Format		

Original	Replacement

