









































Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 OK
Mute	 Mute / Dimmer	Menu Right	 Right
Update	 Play / Slow	Menu Off	 Exit / Cancel / Clear
Reveal	 Pause / Step / Freeze	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Info	 Info / Angle	Volume+	 Vol+
Subt.List	 Subtitle / EQ	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Chan.Down	 CH- / Page-
Menu video	 D.Menu / Top	1	 1
TV/AV	 AV / Input / RDS	2	 2
Txt Expand	 Zoom / Size	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Display	 Display / Media	7	 7
Menu Left	 Left	8	 8



Original	Replacement	Original	Replacement
9	 9		
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		

