 



 


 
 









 




 


 

 

 
 
 

 

 













Original	Replacement	Original	Replacement
 Power	 Power	 B4	 Rec / Rec Mode
 Guide	 Guide / EPG / -/--	 5	 5
 1	 1	 6	 6
 A1	 Shift + 1	 7	 7
 B1	 Play / Slow	 8	 8
 C1	 << / Tune-	 9	 9
 A2	 Shift + 2	 0	 0
 B2	 Pause / Step / Freeze	 List	 Smart / List
 C2	 >> / Tune+	 Q.View/Reveal	 Display / Media
 2	 2	 P:P	 Shift + Fav / Marker / PC
 C3	 I<< / Preset-	 [+]/Info	 Info / Angle
 B3	 Stop / Hold	 S.Mode	 Sound / Title
 A3	 Shift + 3	 Nicam/Audio	 Audio / Lang I/II
 3	 3	 Hold	 Shift + Stop /
 A4	 Shift + 4	 Mix	 Shift + Text /
 C4	 >>I / Preset+	 Size	 Zoom / Size
 4	 4	 Radio	 TV/Radio /





Original	Replacement
 Index	 Shift + Info / Angle
 Text	 Text / Goto
 Subpage	 Shift + Subtitle / EQ
 Mute	 Mute / Dimmer
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Prog+	 CH+ / Page+
 Up	 Up
 Down	 Down
 Prog-	 CH- / Page-
 Left	 Left
 Vol-	 Vol-
 Vol+	 Vol+
 Right	 Right
 OK/Enter	 OK
 Exit	 Exit / Cancel / Clear
 Sub-T	 Subtitle / EQ

Original	Replacement
 FAV	 Fav / Marker / PC
 Aspect	 Picture / Format
 Sleep	 Sleep / Timer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

