



| Original |             | Replacement |                       | Original |              | Replacement |                        |
|----------|-------------|-------------|-----------------------|----------|--------------|-------------|------------------------|
|          | Power       |             | Power                 |          | Vol+         |             | Vol+                   |
|          | Sleep       |             | Sleep / Timer         |          | Vol-         |             | Vol-                   |
|          | PlayTimer   |             | Pause / Step / Freeze |          | Mute         |             | Mute / Dimmer          |
|          | Clock/Timer |             | Shift + Sleep / Timer |          | Bluetooth    |             | Shift + 9              |
|          | 1           |             | 1                     |          | CD/USB       |             | Red / Netflix / Search |
|          | 2           |             | 2                     |          | Radio/Ext-In |             | Green / APP / Repeat   |
|          | 3           |             | 3                     |          | I<<          |             | I<< / Preset-          |
|          | 4           |             | 4                     |          | Play/Pause   |             | Play / Slow            |
|          | 5           |             | 5                     |          | >>I          |             | >>I / Preset+          |
|          | 6           |             | 6                     |          | <<           |             | << / Tune-             |
|          | 7           |             | 7                     |          | Stop         |             | Stop / Hold            |
|          | 8           |             | 8                     |          | >>           |             | >> / Tune+             |
|          | 9           |             | 9                     |          | OK           |             | OK                     |
|          | 0           |             | 0                     |          | D.Bass       |             | Text / Goto            |
|          | DEL         |             | Exit / Cancel / Clear |          | Sound        |             | Sound / Title          |
|          | +10         |             | Guide / EPG / ---     |          | Preset EQ    |             | AV / Input / RDS       |
|          | Program     |             | TV/Radio /            |          | Display      |             | Display / Media        |



Program

