









 









 

 













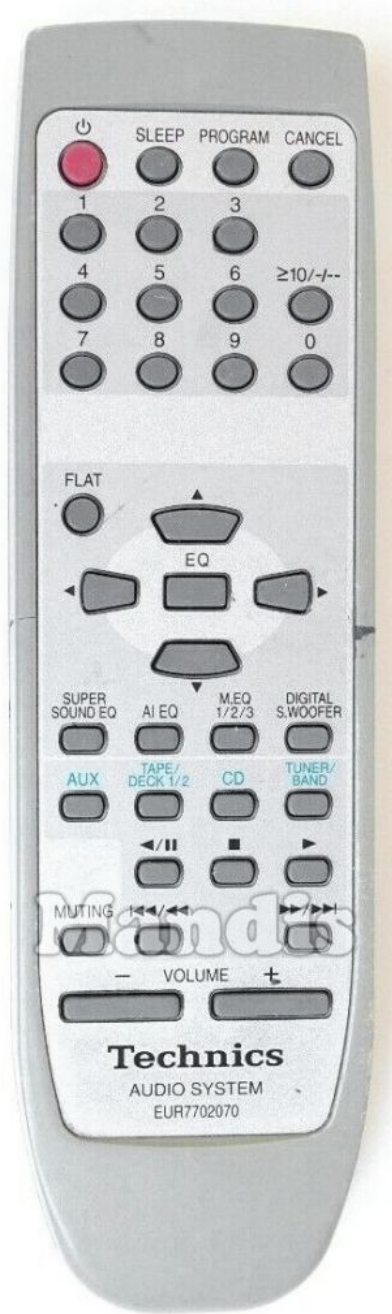 
















 



Original	Replacement
 Power	 Power
 Sleep	 Sleep / Timer
 Program	 TV/Radio /
 Cancel	 Back / Return
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 +10/-/--	 Guide / EPG / -/--
 7	 7
 8	 8
 9	 9
 0	 0
 Flat	 Smart / List
 Up	 Up

Original	Replacement
 Left	 Left
 EQ	 Subtitle / EQ
 EQ	 OK
 Right	 Right
 Down	 Down
 Super Sound EQ	 Sound / Title
 AI EQ	 Audio / Lang I/II
 Digital S.Woofer	 Eject / Surround
 AUX	 Red / Netflix / Search
 AUX	 Shift + 7
 Tape/Deck 1/2	 Green / APP / Repeat
 Tape/Deck 1/2	 Shift + 5
 CD	 Yellow / YouTube / Repeat
 CD	 Shift + 3
 Tuner/Band	 Blue / Prime Video / Random
 Tuner/Band	 Shift + 6
 </II	 Pause / Step / Freeze





Original	Replacement
 Stop	 Stop / Hold
 Play	 Play / Slow
 Muting	 Mute / Dimmer
 <<</I<<	 << / Tune-
 <<</I<<	 I<< / Preset-
 >>>/>>I	 >> / Tune+
 >>>/>>I	 >>I / Preset+
 Volume-	 Vol-
 Volume+	 Vol+

Original	Replacement

