



Original	Replacement	Original	Replacement
Power	Power	Play	Play / Slow
Open/Close	Eject / Surround	Pause/Step	Pause / Step / Freeze
1	1	Stop	Stop / Hold
2	2	DVD Menu	D.Menu / Top
3	3	Title	Sound / Title
4	4	Up	Up
5	5	Enter	OK
6	6	Down	Down
7	7	Right	Right
8	8	Left	Left
9	9	Return	Back / Return
0	0	Display	Display / Media
Clear	Exit / Cancel / Clear	Audio	Audio / Lang I/II
<<	<< / Tune-	Subtitle	Subtitle / EQ
>>	>> / Tune+	Angle	Info / Angle
I<<	I<< / Preset-	Setup	Setup / OPT /
>>I	>>I / Preset+	Marker	Fav / Marker / PC

Original	Replacement	Original	Replacement
Power	Power	Play	Play / Slow
Open/Close	Eject / Surround	Pause/Step	Pause / Step / Freeze
1	1	Stop	Stop / Hold
2	2	DVD Menu	D.Menu / Top
3	3	Title	Sound / Title
4	4	Up	Up
5	5	Enter	OK
6	6	Down	Down
7	7	Right	Right
8	8	Left	Left
9	9	Return	Back / Return
0	0	Display	Display / Media
Clear	Exit / Cancel / Clear	Audio	Audio / Lang I/II
<<	<< / Tune-	Subtitle	Subtitle / EQ
>>	>> / Tune+	Angle	Info / Angle
I<<	I<< / Preset-	Setup	Setup / OPT /
>>I	>>I / Preset+	Marker	Fav / Marker / PC



