













 

 



 



 













 



















 



 

 







| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Open/Close |  | Eject / Surround |
|  | USB |  | Shift + 8 |
|  | USB |  | CH+ / Page+ |
|  | Prog |  | TV/Radio / |
|  | Mark |  | Fav / Marker / PC |
|  | Clear |  | Exit / Cancel / Clear |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | 10+ |  | Guide / EPG / -/- |
|  | Goto |  | Text / Goto |
|  | << |  | << / Tune- |
|  | Vol- |  | Vol- |
|  | Vol+ |  | Vol+ |
|  | I<< |  | I<< / Preset- |
|  | >> |  | >> / Tune+ |
|  | Play/Pause |  | Play / Slow |
|  | Play/Pause |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |
|  | >>I |  | >>I / Preset+ |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Setup |  | Setup / OPT / |
|  | Left |  | Left |
|  | Enter |  | OK |





| Original | Replacement | Original | Replacement |
|----------|-------------|----------|---------------------------|
| | Right | | Right |
| | Title | | Sound / Title |
| | Down | | Down |
| | OSD | | Display / Media |
| | Zoom | | Zoom / Size |
| | Angle | | Info / Angle |
| | Audio | | Audio / Lang I/II |
| | Sub-T | | Subtitle / EQ |
| | Repeat | | Green / APP / Repeat |
| | A-B | | Yellow / YouTube / Repeat |
| | Slow | | Shift + Play / |
| | L/R | | Smart / List |
| | Step | | Shift + Pause / Step / |
| | Return | | Back / Return |
| | Video | | Shift + 4 |
| | Video | | CH- / Page- |
| | Default | | Rec / Rec Mode |

