







 

 






 















 








Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Fav / Marker / PC
 Recall	 Back / Return
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 EPG	 Guide / EPG / -/--

Original	Replacement
 Exit	 Exit / Cancel / Clear
 Up/FAV+	 Up
 Down/FAV-	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Display	 Display / Media
 Open/Close/Smart	 Eject / Surround
 VOL+	 Vol+
 Vol-	 Vol-
 USB/Media	 Shift + Display / Media
 Play/Pause/Text	 Play / Slow
 Stop/Index	 Stop / Hold
 Rec/Media2	 Rec / Rec Mode
 I<</Hold	 I<< / Preset-





Original		Replacement	
	>>/Size		>> / Preset+
	<</S.Page		<< / Tune-
	>>/Reveal		>> / Tune+
	Red/Goto		Red / Netflix / Search
	Green/Slow		Green / APP / Repeat
	Yellow/REPT		Yellow / YouTube / Repeat
	Blue/A-B		Blue / Prime Video / Random
	D.Setup		Setup / OPT /
	D.Menu		D.Menu / Top
	D.Title		Smart / List
	D.Prog		Text / Goto
	I-II/Nicam		Shift + Picture / Format
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	P.Size		Zoom / Size
	Audio		Audio / Lang I/II
	Sleep		Sleep / Timer

Original		Replacement	
	S.Title		Pause / Step / Freeze
	Tv/Radio		TV/Radio /

