



Original	Replacement
PWR	Power
TV/Rad	TV/Radio /
TV/STB	Display / Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Back	Back / Return
0	0
Mute	Mute / Dimmer
Red	Red / Netflix / Search
OPT	Setup / OPT /

Original	Replacement
Green	Green / APP / Repeat
A/V+	AV / Input / RDS
Yellow / FAV	Yellow / YouTube / Repeat
FAV	Fav / Marker / PC
Blue / A-Z	Blue / Prime Video / Random
Blue / A-Z	Shift + Blue / Prime
Menu	Menu / Home
EPG	Guide / EPG / -/-
Info	Info / Angle
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Vol+	Vol+
Exit	Exit / Cancel / Clear
PR/CH+	CH+ / Page+
































 

 







 

Original	Replacement
	VOL Vol-
	CH Page- CH- / Page-
	STEP - FREEZE Pause / Step / Freeze
	SLOW Play / Slow
	TUNE- << / Tune-
	HOLD Stop / Hold
	TUNE+ >> / Tune+
	REC MODE Rec / Rec Mode
	SHIFT + SLOW Shift + Play /
	LIST Smart / List
	SHIFT + YouTube A-B Shift + Yellow / YouTube /
	SHIFT + PC MARKER Mark / Marker / PC
	GOTO TEXT Text / Goto
	SHIFT + OK Shift + OK
	SHIFT + Left Arrow Shift + Left
	SHIFT + Right Arrow Shift + Right
	TIMER SLEEP Sleep / Timer

Original	Replacement























Original	Replacement	
PWR On/Off		Power
East		D.Menu / Top
TV	 +  Shift + 1	
Dec/Pause		Pause / Step / Freeze
Alt/16:9		Picture / Format
H/V Play		Play / Slow
Opt?		Setup / OPT /
FAV Pref.		Fav / Marker / PC
4ghi		4
Guide Pilote	 +  Shift + Guide / EPG / -/-	
9wxyz		9
8tuv		8
7pqrm		7
6mno		6
3def		3
5jkl		5
2abc		2

Original	Replacement	
1. ?		1
Yellow	 Yellow / YouTube / Repeat	
LNB F.Forward		>> / Tune+
Lang./Rewind		<< / Tune-
TV/SAT		AV / Input / RDS
West		>>I / Preset+
Dev		I<<< / Preset-
0/10		0
Video	 +  Shift + 4	
Red	 Red / Netflix / Search	
Green	 Green / APP / Repeat	
Blue	 Blue / Prime Video / Random	
Freeze	 +  Shift + Pause / Step /	
Menu Up		Up
Mute		Mute / Dimmer
Epg		Guide / EPG / -/-
App	 +  Shift + Green / APP / Repeat	





Original	Replacement	
Info		Info / Angle
Subt.List		Subtitle / EQ
Sleep Timer		Sleep / Timer
Text		Text / Goto
Zoom		Zoom / Size
Menu		Menu / Home
Display		Display / Media
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
CH/Page+		CH+ / Page+
Volume-		Vol-
Audio		Audio / Lang I/II

Original	Replacement	
CH/Page-		CH- / Page-

