



Original	Replacement	Original	Replacement
	Power		8
	Power Tv		9
	Vol+ Tv		Internet
	CH+ Tv		Last View
	Drive Select		0
	AV Input Tv		Radio/Tv
	Vol- Tv		Skipe
	CH- Tv		I<< Skip
	1		Skip >>I
	2		<< Slow/Search/Rewi
	3		Slow/search >>
	CH/Page+		Stop
	4		Pause/PAUSE LIVE
	5		Play
	6		i/Status
	CH/Page-		X/Exit
	7		Guide
	Power		8
	Shift + Power		9
	Vol+		Smart / List
	Shift + CH+ /		Fav / Marker / PC
	Display / Media		0
	Shift + AV / Input / RDS		TV/Radio /
	Vol-		Shift + Smart / List
	Shift + CH- /		I<< / Preset-
	1		>>I / Preset+
	2		<< / Tune-
	3		>> / Tune+
	CH+ / Page+		Stop / Hold
	4		Pause / Step / Freeze
	5		Play / Slow
	6		Info / Angle
	CH- / Page-		Exit / Cancel / Clear
	7		Guide / EPG / -/-





Original	Replacement	Original	Replacement
	Pop-Up menu/Direct		D.Menu / Top
	Left		Shift + TV/Radio / Program
	Up		Zoom / Size
	OK		Picture / Format
	Right		Audio / Lang I/II
	Function Menu		AV / Input / RDS
	Option		DEL
	Down		Sleep / Timer
	Return		Manual Skip -10s
	Red		Shift + Left
	Green		Shift + Right
	Yellow		
	Blue		
	Rec		
	Rec Mode		
	Text		
	STTL		
	D.Menu / Top		
	Left		
	Up		
	OK		
	Right		
	Menu / Home		
	Setup / OPT /		
	Down		
	Back / Return		
	Red / Netflix / Search		
	Green / APP / Repeat		
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		
	Rec / Rec Mode		
	Shift + Rec / Rec Mode		
	Text / Goto		
	Subtitle / EQ		

