

 

 

 

 



 

 

 

 

 

 

 



 





 












 








 

 



 





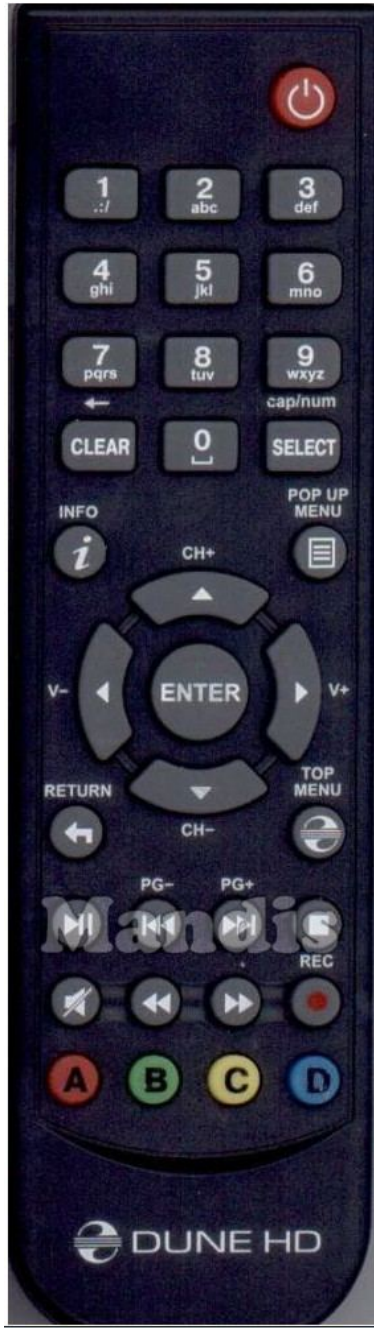 

 

 

 


Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	←Clear		Fav / Marker / PC
	Select/cap/num		Guide / EPG / -/--
	i/Info		Info / Angle
	[≡]		Text / Goto
	Pop Up Menu		Smart / List
	Return		Back / Return
	Top Menu		D.Menu / Top
	Up		Up
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Down		Down
	Vol-		Vol-
	Left		Left
	Right		Right
	Vol+		Vol+
	Enter		OK
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	I<</PG-		I<< / Preset-
	>>I/PG+		>>I / Preset+
	Stop		Stop / Hold
	Mute		Mute / Dimmer
	<<		<< / Tune-





Original	Replacement	Original	Replacement
	>> / Tune+		
	Rec / Rec Mode		
	Red / Netflix / Search		
	Green / APP / Repeat		
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		

