
 
 
 
 
 

 
 




 
 
 
 
 
 



 

 
 
 
 
 
 
 








Original	Replacement	Original	Replacement
	Setup / OPT /		Pause / Step / Freeze
	Power		Play / Slow
	D.Menu / Top		OK
	AV / Input / RDS		Radio(Tv)
	Shift + Power		List
	Exit / Cancel / Clear		Smart / List
	Stop / Hold		Fav / Marker / PC
	I<< / Preset-		Info / Angle
	>>I / Preset+		EPG
	CH+ / Page+		Subtitle / EQ
	Up		Audio / Lang I/II
	CH- / Page-		Teletext
	Down		Mute / Dimmer
	Left		Vol-
	<< / Tune-		Vol+
	>> / Tune+		1
	Right		2
			3



