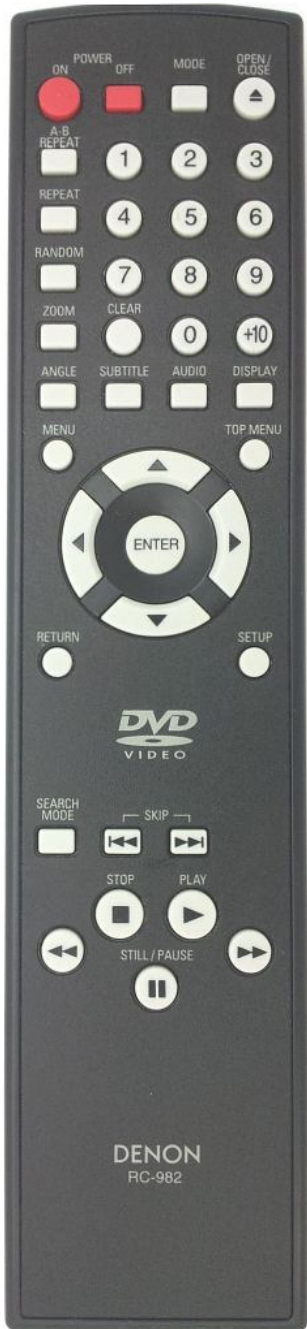 

 









Original	Replacement
 Power On	 Power
 Power Off	 Shift + Power
 Mode	 Picture / Format
 Open/Close	 Eject / Surround
 A-B Repeat	 Yellow / YouTube / Repeat
 Repeat	 Green / APP / Repeat
 Random	 Blue / Prime Video / Random
 Zoom	 Zoom / Size
 Angle	 Info / Angle
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Display	 Display / Media
 Clear	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4

Original	Replacement
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/-
 Menu	 Menu / Home
 Top Menu	 D.Menu / Top
 Return	 Back / Return
 Setup	 Setup / OPT /
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 Search Mode	 Red / Netflix / Search





	Original	Replacement	Original	Replacement
	I<< Skip	 I<< / Preset-		
	Skip >>I	 >>I / Preset+		
	<<	 << / Tune-		
	>>	 >> / Tune+		
	Stop	 Stop / Hold		
	Play	 Play / Slow		
	Still/Pause	 Pause / Step / Freeze		

