











 


 
 
Original	Replacement
 Power	 Power
 CBL/SAT	 AV / Input / RDS
 DVD	 Shift + 2
 Tv Audio	 Audio / Lang I/II
 Blu-ray	 Shift + Blue / Prime
 AUX	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Green / APP /
 8K	 Shift + Yellow / YouTube /
 Phono	 Guide / EPG / -/--
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Internet Radio	 Shift + 0
 Internet Radio	 TV/Radio /
 Quick Select 1	 Sound / Title

Original	Replacement
 Quick Select 2	 Picture / Format
 Quick Select 3	 D.Menu / Top
 Quick Select 4	 Zoom / Size
 CH/Page Up	 CH+ / Page+
 CH/Page Down	 CH- / Page-
 Eco	 Smart / List
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Volume-	 Vol-
 Info	 Info / Angle
 Option	 Shift + Setup / Tools
 Back	 Back / Return
 Setup	 Setup / OPT /
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right





Original	Replacement
 I<</Tune-	 I<< / Preset-
 Play	 Play / Slow
 >>I/Tune+	 >>I / Preset+
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Green/Movie	 Green / APP / Repeat
 Red/Music	 Red / Netflix / Search
 Blue/Game	 Blue / Prime Video / Random
 Yellow/Pure	 Yellow / YouTube / Repeat
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
6	6

Original	Replacement
 7	 7
 8	 8
 9	 9
 0	 0
 Enter	 OK
 Sleep	 Sleep / Timer















 

 











 
 




Original	Replacement	Original	Replacement
	Power		Power
	CBL/SAT		AV / Input / RDS
	DVD		Shift + 2
	Tv Audio		Audio / Lang I/II
	Blu-ray		Shift + Blue / Prime
	AUX		Shift + 7
	Tuner		Shift + 6
	Bluetooth		Shift + 9
	Game		Blue / Prime Video / Random
	8K		Yellow / YouTube / Repeat
	Phono		Guide / EPG / -/--
	USB		Shift + 8
	Media Player		Display / Media
	CD		Shift + 3
	Internet Radio		Shift + 0
	Internet Radio		TV/Radio /
	Quick Select 1		Sound / Title
	Quick Select 2		Picture / Format
	Quick Select 3		D.Menu / Top
	Quick Select 4		Zoom / Size
	CH/Page Up		CH+ / Page+
	CH/Page Down		CH- / Page-
	Mute		Mute / Dimmer
	Volume+		Vol+
	Volume-		Vol-
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Back		Back / Return
	I<</Tune-		I<< / Preset-
	Play		Play / Slow
	>>I/Tune+		>>I / Preset+
	<<		<< / Tune-



 











 

 






 


 







 







Original		Replacement	
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		OK
	Sleep		Sleep / Timer

Original		Replacement	







 













 













Original	Replacement
 Power	 Power
 CBL/SAT	 AV / Input / RDS
 DVD	 Shift + 2
 Tv Audio	 Audio / Lang I/II
 Blu-ray	 Blue / Prime Video / Random
 AUX	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Green / APP / Repeat
 8K	 Yellow / YouTube / Repeat
 Phono	 Guide / EPG / -/--
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Internet Radio	 Shift + 0
 Internet Radio	 TV/Radio /
 Quick Select 1	 Sound / Title

Original	Replacement
 Quick Select 2	 Picture / Format
 Quick Select 3	 D.Menu / Top
 Quick Select 4	 Zoom / Size
 CH/Page Up	 CH+ / Page+
 CH/Page Down	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Volume-	 Vol-
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Back	 Back / Return
 I<</Tune-	 I<< / Preset-
 Play	 Play / Slow
 >>/Tune+	 >>I / Preset+
 <<	 << / Tune-





	Original	Replacement	Original	Replacement
	Pause	 Pause / Step / Freeze		
	Stop	 Stop / Hold		
	>>	 >> / Tune+		
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	Enter	 OK		
	Sleep	 Sleep / Timer		

