










 

 






 










| Original  | Replacement   |
|---|---|
|  Power     |  Power                     |
|  Guide     |  Guide / EPG / -/--        |
|  Input Tv  |  TV/Radio /                |
|  Input AV  |  AV / Input / RDS          |
|  Menu      |  Menu / Home               |
|  Text      |  Text / Goto               |
|  STTL/AD   |  Subtitle / EQ             |
|  Aspect    |  Picture / Format          |
|  Info      |  Info / Angle              |
|  Exit     |  Exit / Cancel / Clear    |
|  Netflix |  Shift + Red / Netflix / |
|  Home    |  Shift + Menu /          |
|  APPS    |  Shift + Green / APP /   |
|  Option  |  Setup / OPT /           |
|  Return  |  Back / Return           |
|  Up      |  Up                      |
|  Down    |  Down                    |

| Original   | Replacement   |
|--|---|
|  Right  |  Right                       |
|  Left   |  Left                        |
|  OK     |  OK                          |
|  Red    |  Red / Netflix / Search      |
|  Green  |  Green / APP / Repeat        |
|  Yellow |  Yellow / YouTube / Repeat   |
|  Blue   |  Blue / Prime Video / Random |
|  Vol+   |  Vol+                        |
|  Vol-   |  Vol-                        |
|  Mute  |  Mute / Dimmer              |
|  CH+  |  CH+ / Page+               |
|  CH-  |  CH- / Page-               |
|  1    |  1                         |
|  2    |  2                         |
|  3    |  3                         |
|  4    |  4                         |
|  5    |  5                         |





| Original  |            | Replacement   |                       | Original |  | Replacement |  |
|---|------------|---|-----------------------|----------|--|-------------|--|
|    | 6          |    | 6                     |          |  |             |  |
|    | 7          |    | 7                     |          |  |             |  |
|    | 8          |    | 8                     |          |  |             |  |
|    | 9          |    | 9                     |          |  |             |  |
|    | 0          |    | 0                     |          |  |             |  |
|    | Last View  |    | Fav / Marker / PC     |          |  |             |  |
|    | Hexa Boost |    | Sound / Title         |          |  |             |  |
|    | <</ <<     |    | << / Tune-            |          |  |             |  |
|    | Play       |    | Play / Slow           |          |  |             |  |
|    | >>/>>      |    | >> / Tune+            |          |  |             |  |
|   | Stop       |   | Stop / Hold           |          |  |             |  |
|  | Pause      |  | Pause / Step / Freeze |          |  |             |  |
|  | Rec        |  | Rec / Rec Mode        |          |  |             |  |
|  | Off Timer  |  | Sleep / Timer         |          |  |             |  |
|  | My APP     |  | Smart / List          |          |  |             |  |
|  | e-Help     |  | Audio / Lang I/II     |          |  |             |  |

