 

 



































 

 







Original	Replacement
 Power Receiver	 Power
 Tuner	 Shift + 6
 CD	 Shift + 3
 VCR	 Shift + 4
 TV	 Shift + 1
 Tape Monitor	 Shift + 5
 Disc	 OK
 Direct Tuning	 Smart / List
 1 Tuner	 1
 2 Tuner	 2
 3 Tuner	 3
 4 Tuner	 4
 5 Tuner	 5
 6 Tuner	 6
 7 Tuner	 7
 8 Tuner	 8
 9 Tuner	 9

Original	Replacement
 0 Tuner	 0
 ≥10 / -/- Tuner	 Guide / EPG / -/-
 Muting	 Mute / Dimmer
 Volume -	 Vol-
 Volume +	 Vol+





	Original	Replacement		Original	Replacement
	Power Receiver		Power		0 CD
	Tuner		Shift + 6		Guide / EPG / -/-
	CD		Shift + 3		<< / Tune-
	VCR		Shift + 4		>> / Preset+
	TV		Shift + 1		Stop / Hold
	Tape Monitor		Shift + 5		Play / Slow
	Disc		OK		Mute / Dimmer
	Direct Tuning		Smart / List		Vol-
	1 CD		1		Vol+
	2 CD		2		
	3 CD		3		
	4 CD		4		
	5 CD		5		
	6 CD		6		
	7 CD		7		
	8 CD		8		
	9 CD		9		

