






























Original	Replacement	Replacement
8	 8	8
Chan.Down		CH- / Page-
1	 1	1
2	 2	2
3	 3	3
4	 4	4
5	 5	5
6	 6	6
7	 7	7
Volume-		Vol-
9	 9	9
Guide -/-- 1.		Guide / EPG / -/--
0/10	 0	0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat

Original	Replacement	Replacement
Blue		Blue / Prime Video / Random
Display		Display / Media
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Info		Info / Angle
Return TV		TV/Radio /
Text		Text / Goto
TV/AV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
On/Off		Power
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return



