









































 







Original	Replacement
	 Mute / Dimmer
	 Power
	 Shift + Picture / Format
	 Sound / Title
	 Picture / Format
	 Guide / EPG / -/-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Smart / List
	 0

Original	Replacement
	 Fav / Marker / PC
	 Subtitle / EQ
	 Text / Goto
	 Shift + Text /
	 Zoom / Size
	 Shift + Stop /
	 D.Menu / Top
	 Eject / Surround
	 Display / Media
	 Info / Angle
	 Shift + Fav / Marker / PC
	 TV/Radio /
	 Audio / Lang I/II
	 Menu / Home
	 Up
	 AV / Input / RDS
	 Left





Original	Replacement
	OK
	Right
	Back / Return
	Down
	Exit / Cancel / Clear
	Vol+
	Sleep / Timer
	CH+ / Page+
	Vol-
	Shift + TV/Radio / Program
	CH- / Page-
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Shift + 0
	Shift + 1
	I<< / Preset-

Original	Replacement
	>>I / Preset+
	<< / Tune-
	>> / Tune+
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

