







 







 

 

 

 

 




 






 







 



 

 

 

 

 



 

 

 

 



 

 

 

 



 







 





 

 



Original	Replacement
 Open/Close	 Eject / Surround
 Speakers Tv	 TV/Radio /
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Enter	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 Pop Up Menu	 Smart / List
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Bluetooth	 Shift + 9
 Home/Menu	 Menu / Home
 Sen	 AV / Input / RDS
 Function	 Info / Angle
 Football	 Picture / Format
 Sound Mode	 Sound / Title
 Audio	 Audio / Lang I/II



 





 

 

 

 





 

 

 

 

 

 











 





 



 



 

 

 

 

 
 
 

 

 

Original	Replacement
 Subtitle	 Subtitle / EQ
 Display	 Display / Media
 Music EQ	 Text / Goto
 <</Tuning-	 << / Tune-
 Play	 Play / Slow
 >>/Tuning+	 >> / Tune+
 I<</Preset-	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>I/Preset+	 >>I / Preset+
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Sleep	 Sleep / Timer
 Vol-	 Vol-

Original	Replacement





Original	Replacement
 Speakers TV Audio Bravia Sync	 AV / Input / RDS
 Power AV Bravia Sync	 Shift + Power
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [=]	 Text / Goto
 0	 0
 Enter	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat

Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home/Menu	 Menu / Home
 Sound Mode	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Display	 Display / Media
 <</Tuning-	 << / Tune-
 Play	 Play / Slow

 





 

 

 

 





 

 

 

 

 


 








 



 





 



 

 

 

 



 

 







Original		Replacement		Original	Replacement
	>>/Tuning+		>> / Tune+		
	<</Preset-		<< / Preset-		
	Pause		Pause / Step / Freeze		
	Stop		Stop / Hold		
	>> /Preset +		>> / Preset+		
	Mute		Mute / Dimmer		
	Vol+		Vol+		
	Prog+		CH+ / Page+		
	Sleep		Sleep / Timer		
	Vol-		Vol-		
	Prog-		CH- / Page-		





Original	Replacement
 Speakers TV Audio Bravia Sync	 TV/Radio /
 Power AV Bravia Sync	 Shift + Power
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [=]	 Text / Goto
 0	 0
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Home/Menu	 Menu / Home
 Subtitle	 Subtitle / EQ
 Display	 Display / Media
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Prog+	 CH+ / Page+
 Sleep	 Sleep / Timer
 Vol-	 Vol-
 Prog-	 CH- / Page-

