






































 





 






 

























































Original	Replacement	Original	Replacement
 POWER	 Power	 GAME / BLUE	 Blue / Prime Video / Random
 1	 1	 SLEEP / GREEN	 Green / APP / Repeat
 2	 2	 SLEEP / GREEN	 Sleep / Timer
 3	 3	 STATUS /	 Yellow / YouTube / Repeat
 4	 4	 PP/CANCEL	 Exit / Cancel / Clear
 5	 5	 P.S	 Display / Media
 6	 6	 MUTE	 Mute / Dimmer
 7	 7	 UP	 Up
 8	 8	 CH+	 CH+ / Page+
 9	 9	 TV/TEXT	 Text / Goto
 0	 0	 LEFT	 Left
 SUBPAGE	 Guide / EPG / -/--	 VOL-	 Vol-
 I/II	 Audio / Lang I/II	 MENU	 Menu / Home
 SWAP / RED	 Back / Return	 RIGHT	 Right
 SWAP / RED	 Red / Netflix / Search	 VOL+	 Vol+
 AV	 AV / Input / RDS	 DOWN	 Down
 FREEZE	 Pause / Step / Freeze	 CH-	 CH- / Page-

Original	Replacement	Original	Replacement
 DIMMER MUTE		 TV	 DVD
 SLOW		 SAT	
 HOLD			
 PRESET+			
 EQ			
 SIZE			
 GOTO			
			
			
			
		 www.mandis.tv	



