




 











 




Original	Replacement	Original	Replacement
POWER	Power	GAME / BLUE	Blue / Prime Video / Random
1	1	SLEEP / GREEN	Green / APP / Repeat
2	2	SLEEP / GREEN	Sleep / Timer
3	3	STATUS /	Yellow / YouTube / Repeat
4	4	PP/CANCEL	Exit / Cancel / Clear
5	5	P.S	Display / Media
6	6	MUTE	Mute / Dimmer
7	7	UP	Up
8	8	CH+	CH+ / Page+
9	9	TV/TEXT	Text / Goto
0	0	LEFT	Left
SUBPAGE	Guide / EPG / -/--	VOL-	Vol-
I/II	Audio / Lang I/II	MENU	Menu / Home
SWAP / RED	Back / Return	RIGHT	Right
SWAP / RED	Red / Netflix / Search	VOL+	Vol+
AV	AV / Input / RDS	DOWN	Down
FREEZE	Pause / Step / Freeze	CH-	CH- / Page-

Original	Replacement	Original	Replacement
GAME / BLUE	Blue / Prime Video / Random	SLEEP / GREEN	Green / APP / Repeat
SLEEP / GREEN	Sleep / Timer	STATUS /	Yellow / YouTube / Repeat
PP/CANCEL	Exit / Cancel / Clear	P.S	Display / Media
MUTE	Mute / Dimmer	UP	Up
CH+	CH+ / Page+	TV/TEXT	Text / Goto
LEFT	Left	VOL-	Vol-
MENU	Menu / Home	RIGHT	Right
VOL+	Vol+	DOWN	Down
CH-	CH- / Page-		





Original	Replacement
 INDEX	 Info / Angle
 T.MODE	 Setup / OPT /
 ZOOM/SIZE	 Zoom / Size
 HOLD	 Stop / Hold
 REVEAL	 Play / Slow
 MIX	 Shift + Text /
 OK	 OK
 T.BRI	 Smart / List
 PIP/POP	 Picture / Format
 MP/SP	 Sound / Title

Original	Replacement

