



| Original | Replacement | Original | Replacement |
|---|---|--|---|
|  Power |  Power |  OSD/Info |  Info / Angle |
|  1 |  1 |  Prog |  TV/Radio / |
|  2 |  2 |  Setup |  Setup / OPT / |
|  3 |  3 |  Menu |  Menu / Home |
|  4 |  4 |  Audio |  Audio / Lang I/II |
|  5 |  5 |  Title |  Shift + Sound / Title |
|  6 |  6 |  Subtitle |  Subtitle / EQ |
|  7 |  7 |  Timer |  Shift + Sleep / Timer |
|  8 |  8 |  +10 |  Guide / EPG / -/- |
|  9 |  9 |  Sleep |  Sleep / Timer |
|  0 |  0 |  Play |  Play / Slow |
|  AUX |  Shift + 7 |  Clock |  Back / Return |
|  USB |  Shift + 8 |  Pause |  Pause / Step / Freeze |
|  Card |  Shift + 4 |  Enter |  OK |
|  DVD |  Shift + 2 |  Up/Preset+ |  Up |
|  Tuner |  Shift + 6 |  Down/Preset- |  Down |
|  Tape |  Shift + 5 |  >>/Tun+ |  >> / Tune+ |





| Original | Replacement |
|----------|-----------------------------|
| <</Tun- | << / Tune- |
| I<< | I<< / Preset- |
| >>I | >>I / Preset+ |
| Stop | Stop / Hold |
| Repeat | Green / APP / Repeat |
| Goto | Text / Goto |
| Rec | Rec / Rec Mode |
| Vol- | Vol- |
| Vol+ | Vol+ |
| Mute | Mute / Dimmer |
| Demo | Picture / Format |
| EQ | Shift + Subtitle / EQ |
| Bass | Shift + Audio / Lang I/II |
| St/Mono | Sound / Title |
| Bookmark | Display / Media |
| Intro | D.Menu / Top |
| Rand | Blue / Prime Video / Random |

| Original | Replacement |
|----------|------------------------|
| RDS/A-B | AV / Input / RDS |
| Zoom | Zoom / Size |
| P.Scan | Eject / Surround |
| Angle | Shift + Info / Angle |
| Step | Shift + Pause / Step / |
| Slow | Shift + Play / |

