

 





























 





Original	Replacement
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Smart / List
	 0
	 Guide / EPG / -/--
	 Menu / Home
	 AV / Input / RDS
	 Up

Original	Replacement
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Exit / Cancel / Clear
	 Vol+
	 Info / Angle
	 CH+ / Page+
	 Vol-
	 Setup / OPT /
	 CH- / Page-
	 TV/Radio /
	 Audio / Lang I/II
	 Text / Goto
	 Subtitle / EQ
	 Shift + Smart / List





	Original	Replacement		Original	Replacement
	Rec	Rec / Rec Mode			
	Stop	Stop / Hold			
	PRE-CH	Fav / Marker / PC			
	<<	<< / Tune-			
	Play	Play / Slow			
	Pause	Pause / Step / Freeze			
	>>	>> / Tune+			
	Red	Red / Netflix / Search			
	Green	Green / APP / Repeat			
	Yellow	Yellow / YouTube / Repeat			
	Blue	Blue / Prime Video / Random			

