


Original	Replacement	Original	Replacement
	Mute / Dimmer		6
	Vol+		7
	Right		AV / Input / RDS
	CH+ / Page+		Zoom / Size
	Fav / Marker / PC		TV/Radio /
	Vol-		Audio / Lang I/II
	Left		Subtitle / EQ
	CH- / Page-		Guide / EPG / -/-
	Back / Return		>> / Tune+
	4		Shift + >> /
	5		Up
	2		>>  / Preset+
	3		<< / Tune-
	0		Shift + << /
	1		Down
	8		<< / Preset-
	9		Red / Netflix / Search

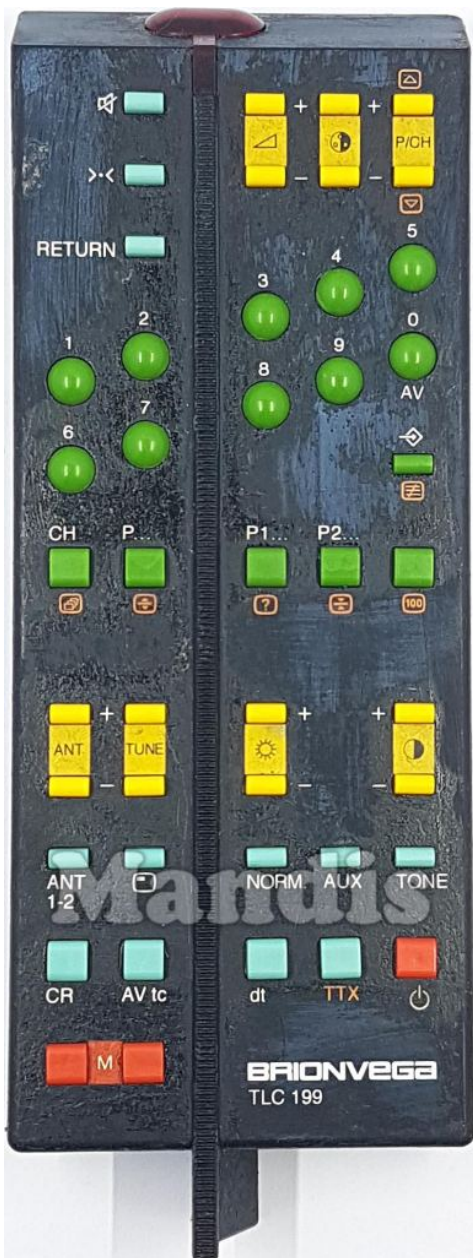





Original	Replacement
Mute	Mute / Dimmer
Vol+	Vol+
Color+	Right
P/CH+	CH+ / Page+
><	Fav / Marker / PC
Vol-	Vol-
Color-	Left
P/CH-	CH- / Page-
Return	Back / Return
4	4
5	5
2	2
3	3
0/AV	0
1	1
8	8
9	9

Original	Replacement
6	6
7	7
Input/[=]	AV / Input / RDS
CH/[ ]	Zoom / Size
P/[ ]	TV/Radio /
P1/[?]	Audio / Lang I/II
P2/[+]	Subtitle / EQ
100	Guide / EPG / -/-
Ant+	>> / Tune+
Tune+	Shift + >> /
*+	Up
Contrast+	>>I / Preset+
Ant-	<< / Tune-
Tune-	Shift + << /
*-	Down
Contrast-	I<< / Preset-
Ant 1-2	Red / Netflix / Search



