



Original	Replacement	Original	Replacement
	On		Power
	Off		Shift + Power
	1/OPT 1		1
	2/OPT 2		2
	3/COAX 1		3
	4/COAX 2		4
	5/Phono		5
	6/Line 1		6
	7/Line 2		7
	8/USB		8
	9/BT		9
	Disp/Info		Info / Angle
	+10/Sleep		Guide / EPG / -/-
	Scan/Tune/Source		>> / Tune+
	Mute		Mute / Dimmer
	Vol+		Vol+
	<<		<< / Tune-
	DIM		Shift + Mute / Dimmer
	Vol-		Vol-
	SPK A/CD		Smart / List
	Up		Up
	SPK B/USB		Display / Media
	Left		Left
	Enter		OK
	Right		Right
	Menu/SRC		Menu / Home
	Down		Down
	Tone DFT/OPT		Back / Return
	Stop/Tone		Stop / Hold
	I<</Preset		I<< / Preset-
	Play/AM/FM/DB		Play / Slow
	Preset >>I		>>I / Preset+
	Red/Rand/Tuner		Red / Netflix / Search
	Green/RPT/Blen		Green / APP / Repeat





	Original	Replacement	Original	Replacement
MEMORY	Yellow/Prog/Memo	Yellow / YouTube / Repeat		
DELETE	Blue/Clear/Delete	Blue / Prime Video / Random		





Original	Replacement		
	On		Power
	Off		Shift + Power
	1/OPT 1		1
	2/OPT 2		2
	3/COAX 1		3
	4/COAX 2		4
	5/Phono		5
	6/Line 1		6
	7/Line 2		7
	8/USB		8
	9/BT		9
	Disp/Info		Info / Angle
	0		0
	+10/Sleep		Guide / EPG / -/-
	Scan/Tune/Source		>> / Tune+
	Mute		Mute / Dimmer
	Vol+		Vol+

Original	Replacement		
	<<		<< / Tune-
	DIM		Shift + Mute / Dimmer
	Vol-		Vol-
	SPK A/CD		Smart / List
	Up		Up
	SPK B/USB		Display / Media
	Left		Left
	Enter		OK
	Right		Right
	Menu/SRC		Menu / Home
	Down		Down
	Tone DFT/OPT		Back / Return
	Eject/Auto Tune		Eject / Surround
	Stop/Tone		Stop / Hold
	Pause		Pause / Step / Freeze
	I<<< Preset		I<<< / Preset-
	Play/AM/FM/DB		Play / Slow





Original	Replacement	Original	Replacement
Preset >>I	>>I / Preset+		
Red/Rand/Tuner	Red / Netflix / Search		
Green/RPT/Blen	Green / APP / Repeat		
Yellow/Prog/Memo	Yellow / YouTube / Repeat		
Blue/Clear/Delete	Blue / Prime Video / Random		





Original	Replacement	Original	Replacement
	On		Power
	Off		Shift + Power
	Disp/Info		Info / Angle
	Mute		Mute / Dimmer
	Vol+		Vol+
	DIM		Shift + Mute / Dimmer
	Vol-		Vol-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Menu/SRC		Menu / Home
	Down		Down
	Stop/Tone		Stop / Hold
	Pause		Pause / Step / Freeze
	I<< Preset		I<< / Preset-
	Play/AM/FM/DB		Play / Slow





Original	Replacement
 On	 Power
 Off	 Shift + Power
 1/OPT 1	 1
 2/OPT 2	 2
 3/COAX 1	 3
 4/COAX 2	 4
 5/Phono	 5
 6/Line 1	 6
 7/Line 2	 7
 8/USB	 8
 9/BT	 9
 Disp/Info	 Info / Angle
 0	 0
 Scan/Tune/Source	 >> / Tune+
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 <<	 << / Tune-

Original	Replacement
 Vol-	 Vol-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 I<< Preset	 I<< / Preset-
 Play/AM/FM/DB	 Play / Slow
 Preset >>I	 >>I / Preset+
 Red/Rand/Tuner	 Red / Netflix / Search
 Green/RPT/Blen	 Green / APP / Repeat
 Yellow/Prog/Memo	 Yellow / YouTube / Repeat
 Blue/Clear/Delete	 Blue / Prime Video / Random

