





































 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Rec	 Rec / Rec Mode
 0/AV	 0
 Tv/Radio	 TV/Radio /
 <<	 << / Tune-
 Stop/DVR	 Stop / Hold

Original	Replacement
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 SFI	 Smart / List
 Up	 Up
 WWW	 Display / Media
 ↑	 >> / Preset+
 Left	 Left
 OK	 OK
 Right	 Right
 ↓	 << / Preset-
 Zurück	 Back / Return
 Down	 Down
 Info/VOR	 Info / Angle
 P+	 CH+ / Page+
 OPT	 Setup / OPT /
 Vol+	 Vol+















 

 









 











Original	Replacement
 P-	 CH- / Page-
 NAV	 D.Menu / Top
 Vol-	 Vol-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Timer	 Shift + Sleep / Timer
 Ton	 Audio / Lang I/II
 Zoom	 Zoom / Size
 TXT	 Text / Goto
 I>/Still	 Fav / Marker / PC
 HDMI	 Shift + 0
 PIP	 Picture / Format

Original	Replacement





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Rec	 Rec / Rec Mode
 0/AV	 0
 Tv/Radio	 TV/Radio /
 <<	 << / Tune-
 Stop/DVR	 Stop / Hold

Original	Replacement
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 SFI	 Smart / List
 Up	 Up
 WWW	 Display / Media
 ↑	 >> / Preset+
 Left	 Left
 OK	 OK
 Right	 Right
 ↓	 << / Preset-
 Zurück	 Back / Return
 Down	 Down
 Info/VOR	 Info / Angle
 P+	 CH+ / Page+
 OPT	 Setup / OPT /
 Vol+	 Vol+







































Original	Replacement
P-	CH- / Page-
NAV	D.Menu / Top
Vol-	Vol-
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Menu	Menu / Home
Timer	Shift + Sleep / Timer
Ton	Audio / Lang I/II
Zoom	Zoom / Size
TXT	Text / Goto
I>/Still	Fav / Marker / PC
HDMI	Shift + 0
PIP	Picture / Format

Original	Replacement








 

 





 


 


 


 
 


Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Rec		Rec / Rec Mode
	0/AV		0
	Tv/Radio		TV/Radio /
	<<		<< / Tune-
	Stop/DVR		Stop / Hold

Original	Replacement	Original	Replacement
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	SFI		Smart / List
	Up		Up
	WWW		Display / Media
	↑		>> / Preset+
	Left		Left
	OK		OK
	Right		Right
	↓		<< / Preset-
	Zurück		Back / Return
	Down		Down
	Info/VOR		Info / Angle
	P+		CH+ / Page+
	OPT		Setup / OPT /
	Vol+		Vol+





Original	Replacement	Original	Replacement
	P-		CH- / Page-
	NAV		D.Menu / Top
	Vol-		Vol-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	Timer		Shift + Sleep / Timer
	Ton		Audio / Lang I/II
	Zoom		Zoom / Size
	TXT		Text / Goto
	I>/Still		Fav / Marker / PC
	HDMI		Shift + 0
	PIP		Picture / Format

Original	Replacement	Original	Replacement

