
























































 





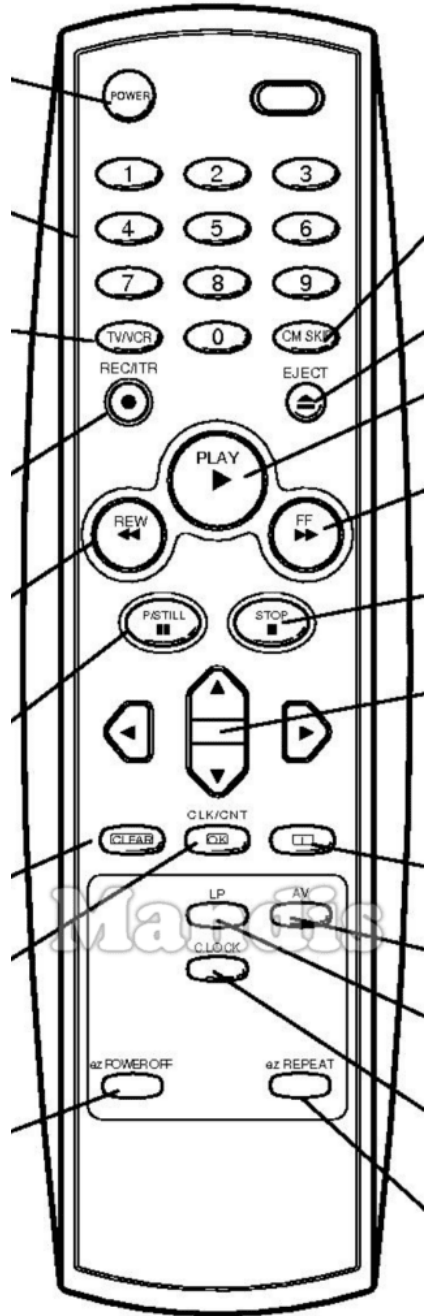


















































| Original | Replacement |
|---|--|
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  TV/VCR |  Smart / List |
|  0 |  0 |
|  CM-Skip |  Display / Media |
|  REC / ITR |  Rec / Rec Mode |
|  Eject |  Eject / Surround |
|  Play |  Play / Slow |
|  << REW |  << / Tune- |

| Original | Replacement |
|--|---|
|  << REW |  I<< / Preset- |
|  >> F FWD |  >> / Tune+ |
|  >> F FWD |  >>I / Preset+ |
|  Pause/Still |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |
|  Left |  Left |
|  Up |  Up |
|  Right |  Right |
|  Down |  Down |
|  Clear |  Exit / Cancel / Clear |
|  OK / CLK / CNT |  OK |
|  i |  Info / Angle |
|  LP |  Text / Goto |
|  AV |  AV / Input / RDS |
|  C.Lock |  TV/Radio / |












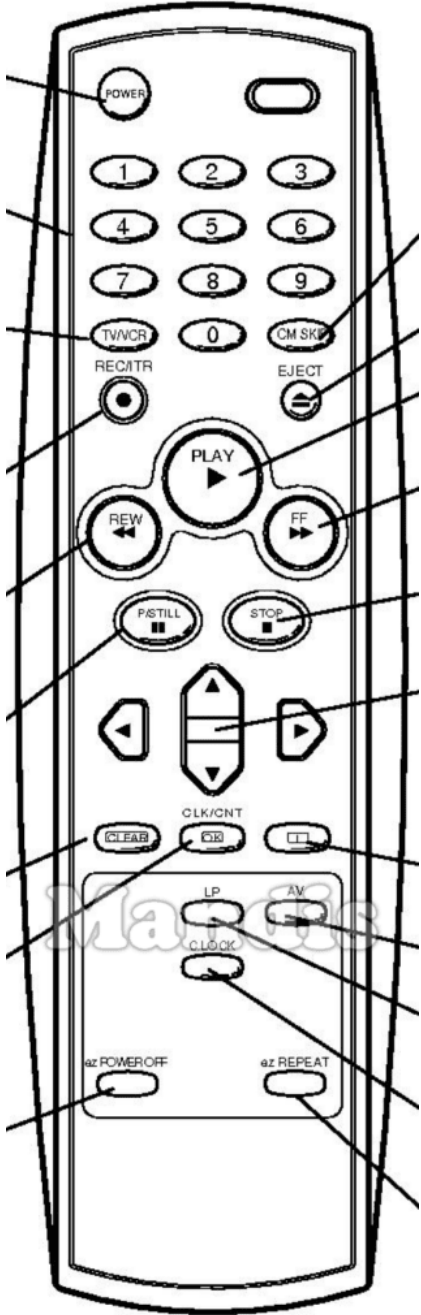


 
 

 




| Original | Replacement | Original | Replacement |
|-------------|---|--------------|---|
| On/Off |  Power | Auto/Track |  D.Menu / Top |
| Audio Out |  Mute / Dimmer | T.Set/Clock |  Setup / OPT / |
| Play |  Play / Slow | Video/Go-To |  Text / Goto |
| Pause |  Pause / Step / Freeze | Input Source |  AV / Input / RDS |
| Stop |  Stop / Hold | Menu |  Menu / Home |
| Record |  Rec / Rec Mode | Menu Up |  Up |
| Rewind |  << / Tune- | Menu Left |  Left |
| F.Forward |  >> / Tune+ | OK Enter |  OK |
| Prev. |  I<< / Preset- | Menu Right |  Right |
| Next |  >>I / Preset+ | Exit |  Exit / Cancel / Clear |
| F.Adv |  Sound / Title | Menu Down |  Down |
| Audio |  Audio / Lang I/II | Slow/Dpss+ |  Vol+ |
| Case Tape |  Eject / Surround | VCR/TV |  Smart / List |
| Mon/TV |  Picture / Format | Tracking+ |  CH+ / Page+ |
| Sp/Lp/Speed |  Zoom / Size | Slow/Dpss- |  Vol- |
| Timer/Sleep |  Sleep / Timer | Display |  Display / Media |
| Progr/C/CH |  TV/Radio / | Tracking- |  CH- / Page- |


| Original | Replacement | Original | Replacement |
|-------------|---|--------------|---|
| On/Off |  Power | Auto/Track |  D.Menu / Top |
| Audio Out |  Mute / Dimmer | T.Set/Clock |  Setup / OPT / |
| Play |  Play / Slow | Video/Go-To |  Text / Goto |
| Pause |  Pause / Step / Freeze | Input Source |  AV / Input / RDS |
| Stop |  Stop / Hold | Menu |  Menu / Home |
| Record |  Rec / Rec Mode | Menu Up |  Up |
| Rewind |  << / Tune- | Menu Left |  Left |
| F.Forward |  >> / Tune+ | OK Enter |  OK |
| Prev. |  I<< / Preset- | Menu Right |  Right |
| Next |  >>I / Preset+ | Exit |  Exit / Cancel / Clear |
| F.Adv |  Sound / Title | Menu Down |  Down |
| Audio |  Audio / Lang I/II | Slow/Dpss+ |  Vol+ |
| Case Tape |  Eject / Surround | VCR/TV |  Smart / List |
| Mon/TV |  Picture / Format | Tracking+ |  CH+ / Page+ |
| Sp/Lp/Speed |  Zoom / Size | Slow/Dpss- |  Vol- |
| Timer/Sleep |  Sleep / Timer | Display |  Display / Media |
| Progr/C/CH |  TV/Radio / | Tracking- |  CH- / Page- |









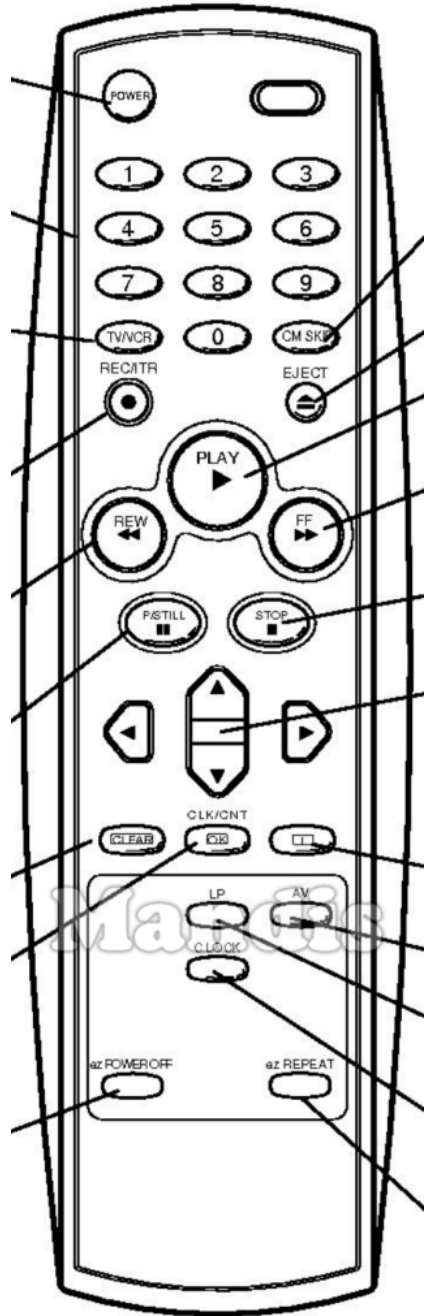





























| Original | Replacement | Original | Replacement |
|-------------|---|----------|-------------|
| 1 |  1 | | |
| 2 |  2 | | |
| 3 |  3 | | |
| 4 |  4 | | |
| 5 |  5 | | |
| 6 |  6 | | |
| 7 |  7 | | |
| 8 |  8 | | |
| 9 |  9 | | |
| -/-- |  Guide / EPG / -/-- | | |
| 0 |  0 | | |
| Ch.Memo |  Fav / Marker / PC | | |
| Repeat |  Green / APP / Repeat | | |
| Slow Down |  Shift + Play / | | |
| Clear 00:00 |  Shift + Exit / Cancel / Clear | | |
| Index Pict+ |  Shift + CH+ / | | |
| Index Pict- |  Shift + CH- / | | |












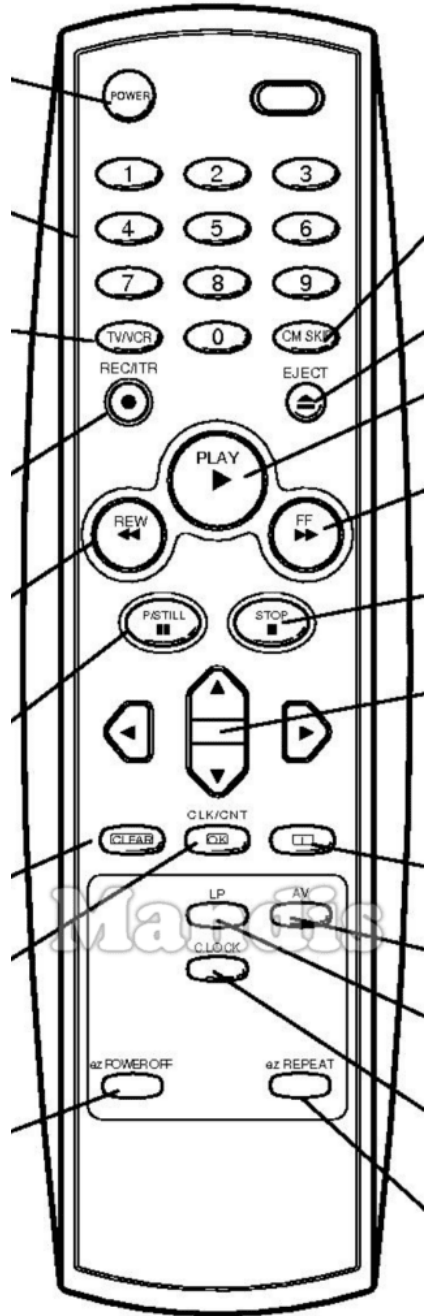






















 
 

 
| Original | Replacement | Replacement |
|---------------|---|-----------------------|
| On/Off |  | Power |
| Audio Out |  | Mute / Dimmer |
| Play |  | Play / Slow |
| Pause |  | Pause / Step / Freeze |
| Stop |  | Stop / Hold |
| Record |  | Rec / Rec Mode |
| Rewind |  | << / Tune- |
| F.Forward |  | >> / Tune+ |
| Prev. |  | I<< / Preset- |
| Next |  | >>I / Preset+ |
| Audio Dub |  | Sound / Title |
| Audio |  | Audio / Lang I/II |
| Rec/Mode |  | Subtitle / EQ |
| Eject/Reverse |  | Eject / Surround |
| Mon/TV |  | Picture / Format |
| Sp/Lp/Speed |  | Zoom / Size |
| Timer/Record |  | Sleep / Timer |

| Original | Replacement | Replacement |
|--------------|---|-----------------------|
| Progr/C/CH |  | TV/Radio / |
| Auto/Track |  | D.Menu / Top |
| T.Set/Clock |  | Setup / OPT / |
| Video/Go-To |  | Text / Goto |
| Input Source |  | AV / Input / RDS |
| Menu |  | Menu / Home |
| Menu Up |  | Up |
| Show View |  | Info / Angle |
| Menu Left |  | Left |
| OK Enter |  | OK |
| Menu Right |  | Right |
| Exit |  | Exit / Cancel / Clear |
| Menu Down |  | Down |
| F.Adv |  | Back / Return |
| Slow/Dpss+ |  | Vol+ |
| VCR/TV |  | Smart / List |
| Chan+ |  | CH+ / Page+ |





| Original | Replacement | Replacement |
|---------------|---|------------------------|
| Slow/Dpss- |  | Vol- |
| Display |  | Display / Media |
| Chan- |  | CH- / Page- |
| 1 |  | 1 |
| 2 |  | 2 |
| 3 |  | 3 |
| 4 |  | 4 |
| 5 |  | 5 |
| 6 |  | 6 |
| 7 |  | 7 |
| 8 |  | 8 |
| 9 |  | 9 |
| -/-- |  | Guide / EPG / -/-- |
| 0 |  | 0 |
| Ch.Memo |  | Fav / Marker / PC |
| Counter Clock |  | Red / Netflix / Search |
| Count Remain |  | Green / APP / Repeat |

| Original | Replacement | Replacement |
|---------------|---|-----------------------------|
| Counter Stop |  | Yellow / YouTube / Repeat |
| Counter Reset |  | Blue / Prime Video / Random |
| Slow Down |  | Shift + Play / |
| Rec. On/Off |  | Shift + Rec / Rec Mode |
| X2 Rew/Play |  | Shift + << / |
| Frame Down |  | Shift + I<< / Preset- |
| Frame Up |  | Shift + >>I / Preset+ |
| Index Pict+ |  | Shift + Up |
| Set- |  | Shift + Left |
| Set+ |  | Shift + Right |
| Index Pict- |  | Shift + Down |
| Otr/A.Otr |  | Shift + Smart / List |
| Tracking+ |  | Shift + CH+ / |
| Vps/Pdc |  | Shift + Display / Media |
| Tracking- |  | Shift + CH- / |
| Search Index |  | Shift + Red / Netflix / |

