



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	S.Mode		Sound / Title
	Audio/Reveal		Audio / Lang I/II
	Zoom/Subpage		Subtitle / EQ
	P.Mode		Picture / Format
	Size		Zoom / Size
	Sleep		Sleep / Timer
	D.Menu		D.Menu / Top
	Text		Text / Goto
	Input		AV / Input / RDS
	LCD Menu		Menu / Home
	Up		Up
	Index		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Recall		Back / Return
	Vol+		Vol+
	DVD Setup		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2





Original	Replacement	Original	Replacement
3	CO - STB 3	ASPECT	SHIFT + FORMAT Picture / Format
4	VIDEO 4	D.SU	SHIFT + SIZE Zoom /
5	TAPE 5	GOT	SHIFT + GOTO Text /
6	TUNER 6	ANGLE	SHIFT + ANGLE Shift + Info / Angle
7	AUX - HDD 7	PGUP SLOW	SHIFT + + CH+ /
8	USB 8	D.DISP	SHIFT + MEDIA Display / Media
9	BLUETOOTH 9	PGDW STE	SHIFT + CH PAGE Shift + CH- /
-/--	GUIDE EPG		
0	HDMI - BAT 0		
AUTO	PC FAV MARKER		
Red/Program	NETFLIX SEARCH		
Green/Intro	APP REPEAT		
Yellow/Repeat	YouTube REPEAT A-B		
Blue/A-B	Prime Video RANDOM		
HOLD	SHIFT + HOLD		
Title	SHIFT + TITLE SOUND		
Nicam	SHIFT + LANG I/II AUDIO		

