 



 















 
























 
 
 



 

 









Original	Replacement
 Input	 AV / Input / RDS
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Lang	 Audio / Lang I/II
 0	 0
 TXT	 Text / Goto
 Vol+	 Vol+
 Home	 Menu / Home

Original	Replacement
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 [i+]	 Info / Angle
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Prime Video	 Shift + Blue / Prime Video / Random





	Original	Replacement		Original	Replacement
	Netflix	 +  Shift + Red / Netflix /			
	You Tube	 +  Shift + Yellow / YouTube /			
	twitch	 Smart / List			
	Rakuten Tv	 +  Shift + Green / APP /			
	*1	 Setup / OPT /			
	<<	 << / Tune-			
	Pause	 Pause / Step / Freeze			
	>>	 >> / Tune+			
	Rec	 Rec / Rec Mode			
	Play	 Play / Slow			
	Stop	 Stop / Hold			

