 



 















 

























 
 

 

 

 









Original	Replacement
 Input	 AV / Input / RDS
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Lang	 Audio / Lang I/II
 0	 0
 TXT	 Text / Goto
 Vol+	 Vol+
 Home	 Menu / Home

Original	Replacement
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 [i+]	 Info / Angle
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Prime Video	 Shift + Blue / Prime Video / Random





Original		Replacement		Original		Replacement	
	Netflix	 + 	Shift + Red / Netflix /				
	You Tube	 + 	Shift + Yellow / YouTube /				
	twitch		Smart / List				
	Rakuten Tv	 + 	Shift + Green / APP /				
	*1		Setup / OPT /				
	<<		<< / Tune-				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Stop		Stop / Hold				

