 

 











 

 



 

 

 



 



 

 

 

 

 

 

 





 

 

 

 



 

 

























 



Original		Replacement		Original		Replacement	
	Power		Power		3		3
	Mute		Mute / Dimmer		4		4
	P.Mode		Picture / Format		5		5
	S.Mode		Sound / Title		6		6
	Pic. Size		Zoom / Size		7		7
	Play / Pause		Play / Slow		8		8
	Play / Pause		Pause / Step / Freeze		9		9
	<<		<< / Tune-		-/--		Shift + Guide / EPG / -/--
	>>		>> / Tune+		0		0
	Stop		Stop / Hold		Return		Back / Return
	I<<		I<< / Preset-		CH+		CH+ / Page+
	>>I		>>I / Preset+		Display		Display / Media
	Nicam / A2		Shift + Audio / Lang I/II		Vol+		Vol+
	Rec PVR		Rec / Rec Mode		CH-		CH- / Page-
	Media		Smart / List		EPG		Guide / EPG / -/--
	1		1		Vol-		Vol-
	2		2		TV Menu		Menu / Home





Original	Replacement
	 Up
	 Sleep / Timer
	 Left
	 OK
	 Right
	 AV / Input / RDS
	 Down
	 Exit / Cancel / Clear
	 Text / Goto
	 +  Shift + Stop /
	 Info / Angle
	 Subtitle / EQ
	 Audio / Lang I/II
	 +  Shift + Zoom /
	 Eject / Surround
	 D.Menu / Top
	 Red / Netflix / Search

Original	Replacement
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Fav / Marker / PC
	 +  Shift + Down
	 +  Shift + Up
	 TV/Radio /

