



Original	Replacement
 Open/Close	 Eject / Surround
 OSD	 Display / Media
 Standby/On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/-
 0/10	 0
 Goto	 Text / Goto
 Setup	 Setup / OPT /
 Up	 Up

Original	Replacement
 Title	 Sound / Title
 Left	 Left
 Enter	 OK
 Right	 Right
 Zoom	 Zoom / Size
 Down	 Down
 Menu	 Menu / Home
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 II>/Step	 Pause / Step / Freeze
 Ran	 Blue / Prime Video / Random
 I>/Slow	 Picture / Format
 Vol-	 Vol-





	Original	Replacement	Original	Replacement
	LUME Vol+	VOL+ Vol+		
	SUBTITLE Subtitle	EQ SUBTITLE Subtitle / EQ		
	AUDIO Audio	LANG I/II AUDIO Audio / Lang I/II		
	ANGLE Angle	ANGLE INFO Info / Angle		
	VIDEO Video	SHIFT + VIDEO 4 Shift + 4		
	PBC PBC	TOP MENU D.MENU D.Menu / Top		
	PROG Prog	PROGRAM TV/RADIO TV/Radio /		
	R/L RL	CH+ CH+ / Page+		
	N/P NP	CH- CH- / Page-		
	REPEAT Repeat	APP Green / APP / Repeat		
	A-B A-B	REPEAT A-B Yellow / YouTube / Repeat		
	RETURN Return	RETURN BACK Back / Return		
	MUTE Mute	DIMMER MUTE Mute / Dimmer		

