 













 

 





























 
 






 




















Original	Replacement	Original	Replacement
 Open/Close	 Eject / Surround	 Setup	 Setup / OPT /
 Power	 Power	 Display	 Display / Media
 VCR	 Shift + 4	 Title/PBC	 Sound / Title
 DVD	 Shift + 2	 Menu	 Menu / Home
 Input	 AV / Input / RDS	 Up	 Up
 1/Tracking-	 1	 PR+	 CH+ / Page+
 2	 2	 PR-	 CH- / Page-
 3/Tracking+	 3	 Down	 Down
 4	 4	 Left	 Left
 5	 5	 Right	 Right
 6	 6	 OK/Enter	 OK
 7	 7	 Subtitle	 Subtitle / EQ
 8	 8	 Audio	 Audio / Lang I/II
 9	 9	 Search	 Red / Netflix / Search
 0	 0	 Zoom	 Zoom / Size
 System	 Smart / List	 <<	 << / Tune-
 Clear	 Exit / Cancel / Clear	 Pause	 Pause / Step / Freeze





	Original	Replacement
	Play	 Play / Slow
	>>	 >> / Tune+
	I<<	 I<< / Preset-
	Stop	 Stop / Hold
	>>I	 >>I / Preset+
	Rec	 Rec / Rec Mode
	Speed	 Picture / Format
	Repeat	 Green / APP / Repeat
	A-B	 Yellow / YouTube / Repeat
	Tv/VCR	 TV/Radio /
	3D	 +  3
	Mark	 Fav / Marker / PC
	Angle	 Info / Angle
	CM-Skip	 Guide / EPG / --
	Replay	 Text / Goto
	Last CH	 Back / Return
	Program	 +  Shift + TV/Radio / Program

Original	Replacement

