







 






Original	Replacement
 Mute	 Mute / Dimmer
 EPG	 Guide / EPG / -/--
 Info	 Info / Angle
 DVB/AV	 AV / Input / RDS
 Pause	 Pause / Step / Freeze
 1	 1
 2	 2
 3	 3
 Fav	 Fav / Marker / PC
 4	 4
 5	 5
 6	 6
 TV/Radio	 TV/Radio /
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return

Original	Replacement
 Up / CH+	 CH+ / Page+
 Up / CH+	 Up
 0	 0
 Audio	 Audio / Lang I/II
 Left / Vol-	 Vol-
 Left / Vol-	 Left
 OK	 OK
 Right / Vol+	 Vol+
 Right / Vol+	 Right
 TTX	 Text / Goto
 Menu	 Menu / Home
 Down / CH-	 CH- / Page-
 Down / CH-	 Down
 Exit	 Exit / Cancel / Clear
 Subtitle	 Subtitle / EQ
 Red / Function	 Red / Netflix / Search
 Red / Function	 Smart / List





	Original	Replacement	Original	Replacement
		Green / Screen		
		Green / Screen		
		Yellow / Speaker		
		Yellow / Speaker		
		Blue / Aspect		
		Blue / Aspect		

