




































 








 






















| Original | Replacement | Original | Replacement |
|---|--------------------------|---|-----------------------|
|  | Power |  | Tv/Radio |
|  | Mute |  | i |
|  | USB/Media 1 |  | Sleep |
|  | USB/Media 1 |  | Source |
|  | Play/Pause/Text |  | Menu |
|  | Play/Pause/Text |  | Left |
|  | Play/Pause/Text |  | Up |
|  | Stop/Index |  | Right |
|  | Rec/Media2 |  | OK |
|  | Rec/Media2 |  | Down |
|  | I<</Hold |  | Mouse |
|  | >>I/Size |  | Smart |
|  | <</S.Page |  | Exit |
|  | >>/Reveal |  | CH+ |
|  | I-II/Nicam |  | EPG |
|  | I-II/Audio |  | VOL+ |
|  | Subtitle |  | CH- |
|  | Dimmer / Mute |  | TV/Radio / |
|  | Display / Media |  | Info / Angle |
|  | Shift + 8 |  | Sleep / Timer |
|  | Text / Goto |  | AV / Input / RDS |
|  | Play / Slow |  | Menu / Home |
|  | Pause / Step / Freeze |  | Left |
|  | Stop / Hold |  | Up |
|  | Rec / Rec Mode |  | Right |
|  | Shift + Display / Media |  | OK |
|  | I<< / Preset- |  | Down |
|  | >>I / Preset+ |  | Shift + OK |
|  | << / Tune- |  | Smart / List |
|  | >> / Tune+ |  | Exit / Cancel / Clear |
|  | Shift + Picture / Format |  | CH+ / Page+ |
|  | Audio / Lang I/II |  | Guide / EPG / -/- |
|  | Subtitle / EQ |  | Vol+ |
| | |  | CH- / Page- |





| Original | Replacement |
|------------|----------------------------|
| Open/Close | Eject / Surround |
| Vol- | Vol- |
| D.Setup | Setup / OPT / |
| Picture | Picture / Format |
| D.Menu | D.Menu / Top |
| Sound | Sound / Title |
| D.Title | Shift + Sound / Title |
| P.Size | Zoom / Size |
| D.Prog | Shift + TV/Radio / Program |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |

| Original | Replacement |
|----------|-----------------------------|
| 9 | 9 |
| FAV | Fav / Marker / PC |
| 0 | 0 |
| Recall | Back / Return |
| Red | Red / Netflix / Search |
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |

