







 



 





 











 








 






 







| Original | Replacement | Original | Replacement |
|---|--|---|---|
|  Photo |  Smart / List |  </<II |  Left |
|  Zero Set |  Setup / OPT / |  Stop |  Stop / Hold |
|  Start/Stop |  Power |  >/II> |  Right |
|  Display |  Display / Media |  Pause |  Pause / Step / Freeze |
|  Data Code |  Menu / Home |  Slow I> |  Sleep / Timer |
|  T |  Up |  X2 |  Zoom / Size |
|  Play Memory |  Exit / Cancel / Clear |  Mark |  Fav / Marker / PC |
|  Index Memory |  Info / Angle |  Audio Dub |  Audio / Lang I/II |
|  Memory- |  Vol- | | |
|  Memory+ |  Vol+ | | |
|  W |  Down | | |
|  Search Mode |  Red / Netflix / Search | | |
|  I<< |  I<< / Preset- | | |
|  >>I |  >>I / Preset+ | | |
|  << |  << / Tune- | | |
|  Play |  Play / Slow | | |
|  >> |  >> / Tune+ | | |

