

























 








 



 











 

 















 







 

 





| Original | Replacement | Original | Replacement |
|--|--|---|---|
|  Color |  Picture / Format |  9 |  9 |
|  Dimmer |  Mute / Dimmer |  Display(9) |  Shift + Display / Media |
|  Standby/On |  Power |  Set |  Menu / Home |
|  Clock/Timer |  Shift + Sleep / Timer |  10/← |  Guide / EPG / -/- |
|  FM Mode |  TV/Radio / |  0 |  0 |
|  Sleep |  Sleep / Timer |  - Select |  Left |
|  1 |  1 |  →/+10 |  Fav / Marker / PC |
|  2 |  2 |  Select+ |  Right |
|  3 |  3 |  Cancel |  Exit / Cancel / Clear |
|  Display |  Display / Media |  Rev. Mode |  Back / Return |
|  4 |  4 |  Repeat |  Green / APP / Repeat |
|  5 |  5 |  Play Mode |  Subtitle / EQ |
|  6 |  6 |  CD Play/Pause |  Play / Slow |
|  7 |  7 |  FM/AM |  Shift + 6 |
|  PTY |  Red / Netflix / Search |  Tape/<> |  Shift + 5 |
|  8 |  8 |  AUX/MD |  AV / Input / RDS |
|  TA/News/Info |  Info / Angle |  I<< |  I<< / Preset- |





| Original | Replacement |
|--|---|
|  Stop |  Stop / Hold |
|  >>I |  >>I / Preset+ |
|  Beep |  Setup / OPT / |
|  Sound Mode/♪ |  Sound / Title |
|  Ahb Pro |  Smart / List |
|  Vol- |  Vol- |
|  Vol+ |  Vol+ |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

