



Original	Replacement	Original	Replacement
Power	Power	Vol-	Left
Game	Smart / List	CH+	CH+ / Page+
Sleep	Sleep / Timer	CH+	Up
1	1	Vol+	Vol+
2	2	Vol+	Right
3	3	CH-	CH- / Page-
Display	Display / Media	CH-	Down
4	4	Mute	Mute / Dimmer
5	5	Menu	Menu / Home
6	6		
7	7		
8	8		
9	9		
Channel Return	Back / Return		
0	0		
+100	Guide / EPG / -/--		
Vol-	Vol-		

Original	Replacement	Original	Replacement
Vol-	Left	CH+	CH+ / Page+
CH+	Up	Vol+	Vol+
Vol+	Right	CH-	CH- / Page-
CH-	Down	Mute	Mute / Dimmer
Mute	Menu / Home		
Menu			

