

 

 

 



 

 

 



 







 


















 


Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 Top Menu	 D.Menu / Top
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 On Screen	 Display / Media
 Zoom	 Zoom / Size
 Pause	 Pause / Step / Freeze
 I>/Slow	 AV / Input / RDS
 Stop	 Stop / Hold
 I<<	 << / Tune-
 Play	 Play / Slow

Original	Replacement
 >>I	 >> / Tune+
 1	 1
 2	 2
 3	 3
 P.Mode	 Picture / Format
 4	 4
 5	 5
 6	 6
 Clear	 Exit / Cancel / Clear
 7	 7
 8	 8
 9	 9
 0	 0
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Setup	 Setup / OPT /





Original	Replacement
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Random	 Blue / Prime Video / Random
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search

Original	Replacement

