

 









































 















 











Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Fav	 Fav / Marker / PC
 0	 0
 Back	 Back / Return
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up

Original	Replacement
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Source	 AV / Input / RDS
 EPG	 Guide / EPG / -/--
 Audio	 Audio / Lang I/II
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 P.Size	 Zoom / Size
 CH+	 CH+ / Page+
 Fav+	 Shift + Up
 Vol+	 Vol+
 CH-	 CH- / Page-
 Fav-	 Shift + Down
 Vol-	 Vol-
 Display	 Display / Media





Original	Replacement
Auto	Setup / OPT /
Sleep	Sleep / Timer
S.Title	Subtitle / EQ
Freeze	Pause / Step / Freeze
Text	Text / Goto
Index	Info / Angle
Nicam	Shift + Audio / Lang I/II
Radio	TV/Radio /
Hold	Shift + Stop /
I<<	I<< / Preset-
Size	Shift + Zoom /
>>I	>>I / Preset+
S.Page	Shift + Subtitle / EQ
<<	<< / Tune-
Reveal	Eject / Surround
>>	>> / Tune+
Usb / Media	Shift + Display / Media

Original	Replacement
Usb / Media	Shift + 8
Play / Pause	Play / Slow
Stop	Stop / Hold
Rec	Rec / Rec Mode
Red / Goto	Shift + Text /
Red / Goto	Red / Netflix / Search
Green / Slow	Green / APP / Repeat
Green / Slow	Shift + Play /
Yellow / Repeat	Shift + Green / APP /
Yellow / Repeat	Yellow / YouTube / Repeat
Blue / A-B	Blue / Prime Video / Random
Blue / A-B	Shift + Yellow / YouTube /

