 

 

 

 

 



 











 



 


















 



 
 






 






 
 


 


| Original | Replacement | Original | Replacement |
|--------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
|  Standby |  Shift + Power |  Tune |  Shift + 6 |
|  On |  Power |  USB |  Shift + 8 |
|  HDMI |  Shift + 0 |  M-XP |  Shift + Guide / EPG / -/-- |
|  Zone A |  Sound / Title |  Input Up |  CH+ / Page+ |
|  Zone B |  Audio / Lang I/II |  Setup |  Setup / OPT / |
|  A/D |  Red / Netflix / Search |  Mute |  Mute / Dimmer |
|  ATT |  Green / APP / Repeat |  Volume+ |  Vol+ |
|  SPKR A-B |  Yellow / YouTube / Repeat |  Input Down |  CH- / Page- |
|  7.1 |  Blue / Prime Video / Random |  Display |  Display / Media |
|  BD |  Shift + 5 |  Surr |  Eject / Surround |
|  DVD |  Shift + 2 |  Volume- |  Vol- |
|  VCR |  Shift + 4 |  Top |  Smart / List |
|  DSS |  Shift + 9 |  Up |  Up |
|  TV |  Shift + 1 |  Info |  Info / Angle |
|  CD |  Shift + 3 |  Left |  Left |
|  CDR |  Shift + Fav / Marker / PC |  Enter |  OK |
|  AUX |  Shift + 7 |  Right |  Right |



 







 



 

 

 

 

 



 

 

 

 

 

 



 



 





 

 

 





 

 

 



 



| Original | Replacement |
|----------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
|  Menu |  Menu / Home |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  HT EQ |  Guide / EPG / -/-- |
|  Auto |  1 |
|  Stereo |  2 |
|  P.Direct |  3 |
|  Sleep |  Sleep / Timer |
|  Sleep |  4 |
|  M-Dax |  5 |
|  EQ |  6 |
|  EQ |  Subtitle / EQ |
|  LIP Sync |  7 |
|  Night |  8 |
|  T.Tone |  Text / Goto |
|  CH Sel |  0 |
|  V-Off |  9 |

| Original | Replacement |
|---------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
|  Treble- |  I<< / Preset- |
|  Treble+ |  >>I / Preset+ |
|  CH- |  Shift + CH- / |
|  Bass- |  << / Tune- |
|  CH+ |  Shift + CH+ / |
|  Bass+ |  >> / Tune+ |

 

 





| Original | Replacement | Original | Replacement |
|---------------------------------------------------------------------------------------|-------------|---------------------------------------------------------------------------------------|-----------------------------|
|  | Power |  | Power |
|  | Setup |  | Setup / OPT / |
|  | Mute |  | Mute / Dimmer |
|  | Volume+ |  | Vol+ |
|  | Display |  | Display / Media |
|  | Volume- |  | Vol- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Menu |  | Menu / Home |
|  | Down |  | Down |
|  | Memo |  | Smart / List |
|  | Pause |  | Pause / Step / Freeze |
|  | Play |  | Play / Slow |
|  | Stop |  | Stop / Hold |
|  | I<<< |  | I<<< / Preset- |
|  | >> |  | >> / Preset+ |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | Repeat |  | Green / APP / Repeat |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | Random |  | Blue / Prime Video / Random |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | CLR |  | Exit / Cancel / Clear |
|  | 0 |  | 0 |
|  | +10 |  | Guide / EPG / -/- |

 

 





 



 





 

 















 





 

 



 

 

 

 

 





| Original | | Replacement | | Original | | Replacement | |
|-----------------------------------------------------------------------------------|-----|-----------------------------------------------------------------------------------|-------------|----------|--|-------------|--|
|  | CH- |  | CH- / Page- | | | | |
|  | CH+ |  | CH+ / Page+ | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |





| Original | | Replacement | | Original | | Replacement | |
|-------------------------------------------------------------------------------------|---------|-------------------------------------------------------------------------------------|-----------------|---------------------------------------------------------------------------------------|------|---------------------------------------------------------------------------------------|-----------------------|
|  | Power |  | Power |  | 2 |  | 2 |
|  | Mute |  | Mute / Dimmer |  | 3 |  | 3 |
|  | Volume+ |  | Vol+ |  | 4 |  | 4 |
|  | Display |  | Display / Media |  | 5 |  | 5 |
|  | Volume- |  | Vol- |  | 6 |  | 6 |
|  | Tune+ |  | >> / Tune+ |  | 7 |  | 7 |
|  | Info |  | Info / Angle |  | 8 |  | 8 |
|  | Preset- |  | << / Preset- |  | 9 |  | 9 |
|  | Enter |  | OK |  | CLR |  | Exit / Cancel / Clear |
|  | Preset+ |  | >> / Preset+ |  | 0 |  | 0 |
|  | Menu |  | Menu / Home |  | CAT- |  | CH- / Page- |
|  | Tune- |  | << / Tune- |  | CAT+ |  | CH+ / Page+ |
|  | Memo |  | Smart / List | | | | |
|  | T.Mode |  | Text / Goto | | | | |
|  | P.Scan |  | D.Menu / Top | | | | |
|  | Band |  | Setup / OPT / | | | | |
|  | 1 |  | 1 | | | | |

