



Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 P-	 Shift + CH- /
 P-	 I<< / Preset-
 0 / Sleep	 Shift + Sleep / Timer
 0 / Sleep	 0
 P+	 Shift + CH+ /
 P+	 >>I / Preset+

Original	Replacement
 Info	 Info / Angle
 Subt	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 List	 Smart / List
 Vol+	 Vol+
 M/P	 Setup / OPT /
 CH+	 CH+ / Page+
 Vol-	 Vol-
 TV/Radio	 TV/Radio /
 CH-	 CH- / Page-
 Text	 Text / Goto
 Fav	 Fav / Marker / PC
 EPG	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK





Original	Replacement	Original	Replacement
	Right		Right
	Menu		Menu / Home
	Down		Down
	Recall		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	>		Shift + Pause / Step /
	Film		Display / Media
	Zoom		Zoom / Size
	Timer		Sleep / Timer
	USB		Shift + 8
	USB		AV / Input / RDS

