





 













Original	Replacement
 Power	 Power
 Sleep	 Sleep / Timer
 Auto Off	 Blue / Prime Video / Random
 Display	 Display / Media
 Clock/Timer	 Shift + Sleep / Timer
 Dimmer	 Shift + Mute / Dimmer
 Timer Play/Rec	 Rec / Rec Mode
 Disc	 D.Menu / Top
 1	 1
 2	 2
 3	 3
 Program	 TV/Radio /
 4	 4
 5	 5
 6	 6
 Play Mode	 Picture / Format
 7	 7

Original	Replacement
 8	 8
 9	 9
 Repeat	 Green / APP / Repeat
 Del	 Exit / Cancel / Clear
 0	 0
 >10	 Guide / EPG / -/-
 Play/Pause CD	 Play / Slow
 Tuner/Band	 Shift + 6
 Stop/Clear	 Stop / Hold
 <> Tape	 Pause / Step / Freeze
 AUX	 Shift + 7
 Vol-	 Vol-
 Vol+	 Vol+
 <-Album	 << / Tune-
 Album->	 >> / Tune+
 I<</Down/Rew	 I<< / Preset-
 >>I/Up/FF	 >>I / Preset+





Original	Replacement	Original	Replacement
 INTRO	Intro	 HOME MENU	Menu / Home
 MARKER	Marker	 PC FAV MARKER	Fav / Marker / PC
 TITLE SEARCH	Title Search	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
 ENTER	Enter	 OK	OK
 RE-MASTER S.SOUND EQ	S.Sound EQ	 GOTO TEXT	Text / Goto
 RE-MASTER S.SOUND EQ	Re-Master	 EQ SUBTITLE	Subtitle / EQ
 SOUND	Sound	 TITLE SOUND	Sound / Title
 MUTING	Muting	 DIMMER MUTE	Mute / Dimmer

Original	Replacement	Original	Replacement

