



Original	Replacement
Open/Close	Eject / Surround
Power	Power
Bluetooth	Shift + 9
USB	Shift + 8
AUX/Digital	Shift + 7
Net	Shift + Display / Media
Tuner	Shift + 6
CD	Shift + 3
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Original	Replacement
Memory	Guide / EPG / -/--
0	0
Option	Setup / OPT /
<<</>>>	<<< / Tune-
>>>/>>>	>>> / Tune+
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
Volume+	Vol+
Mute	Mute / Dimmer
Volume-	Vol-
Repeat	Green / APP / Repeat





Original	Replacement
SHUFFLE	Blue / Prime Video / Random
DISPLAY	Display / Media
DIMMER	Shift + Mute / Dimmer
SLEEP	Sleep / Timer
HOME	Menu / Home
Favorites A	Sound / Title
Favorites B	Audio / Lang I/II
Favorites C	Subtitle / EQ

Original	Replacement

